
INSTALLATION GUIDE

CTS Turbo BMW G87 M2, G80 M3, G82 M4 Skid Plate/Oil cooler guard


CTS-HW-567

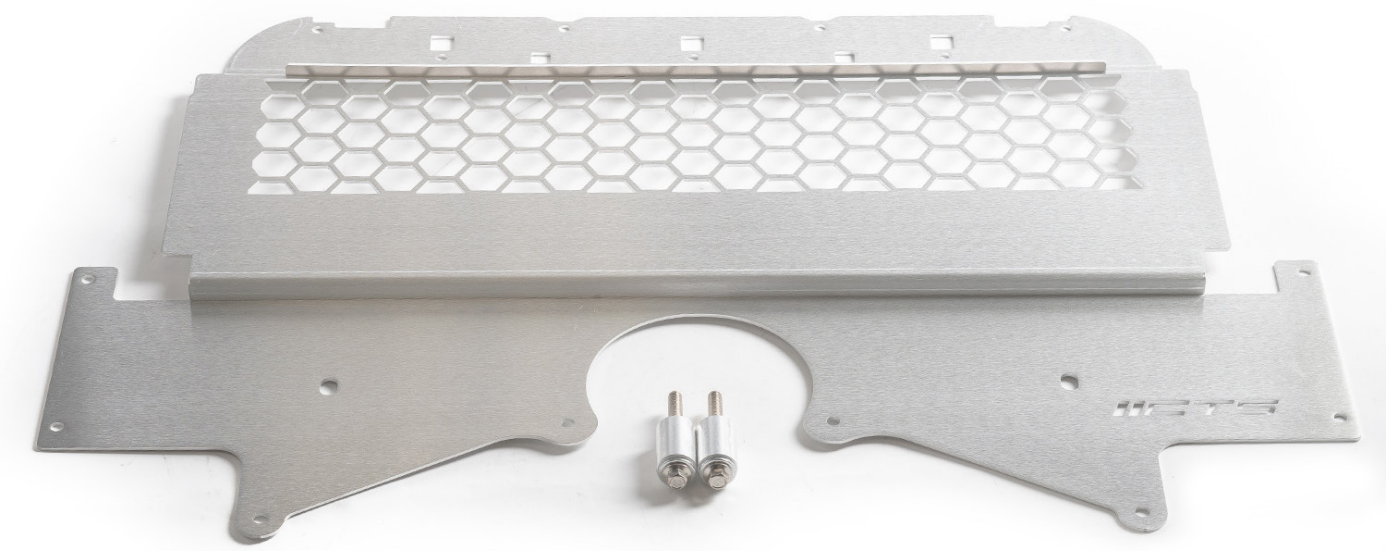

www.CTSTURBO.com

WHAT IS INCLUDED

1. Skid Plate
2. Spacer and Hardware

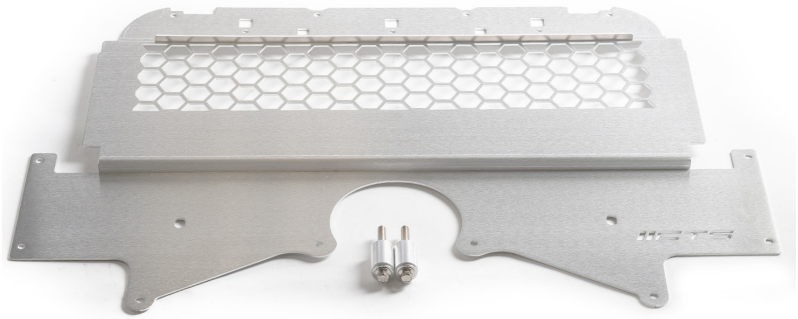

NOTES

Always make sure the car is safe to work on. Do not work on a hot motor.


STEP 1

Remove the front guard.



STEP 2

Remove the splash guard.

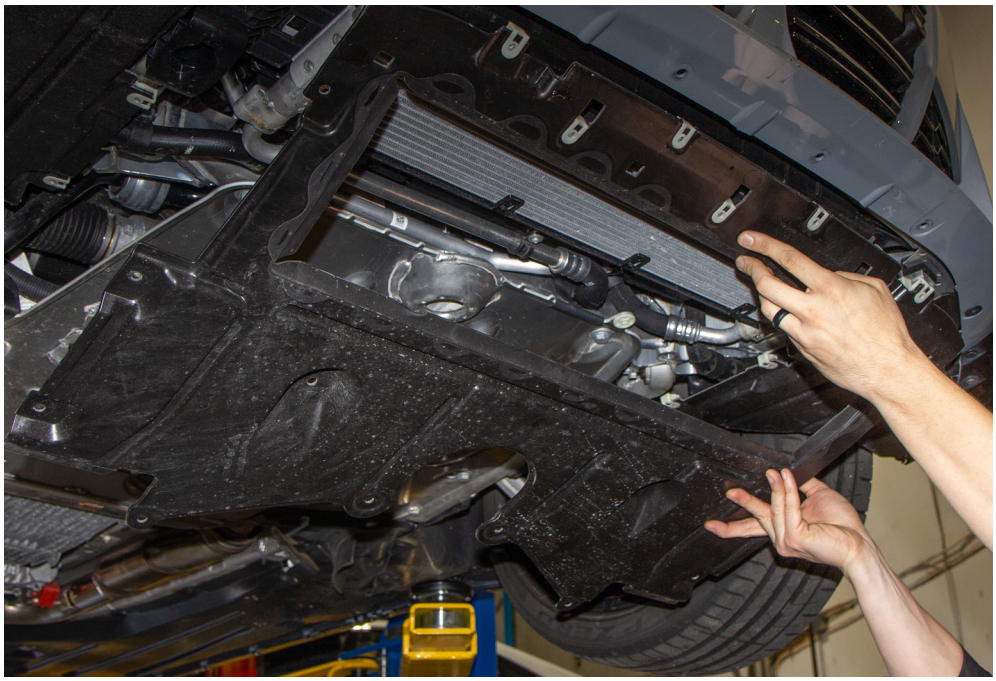


STEP 3

Remove the factory rubber air dam. You will be installing this onto the CTS skid plate.



STEP 4


Transfer the clips from the factory splash guard to the CTS skid plate.

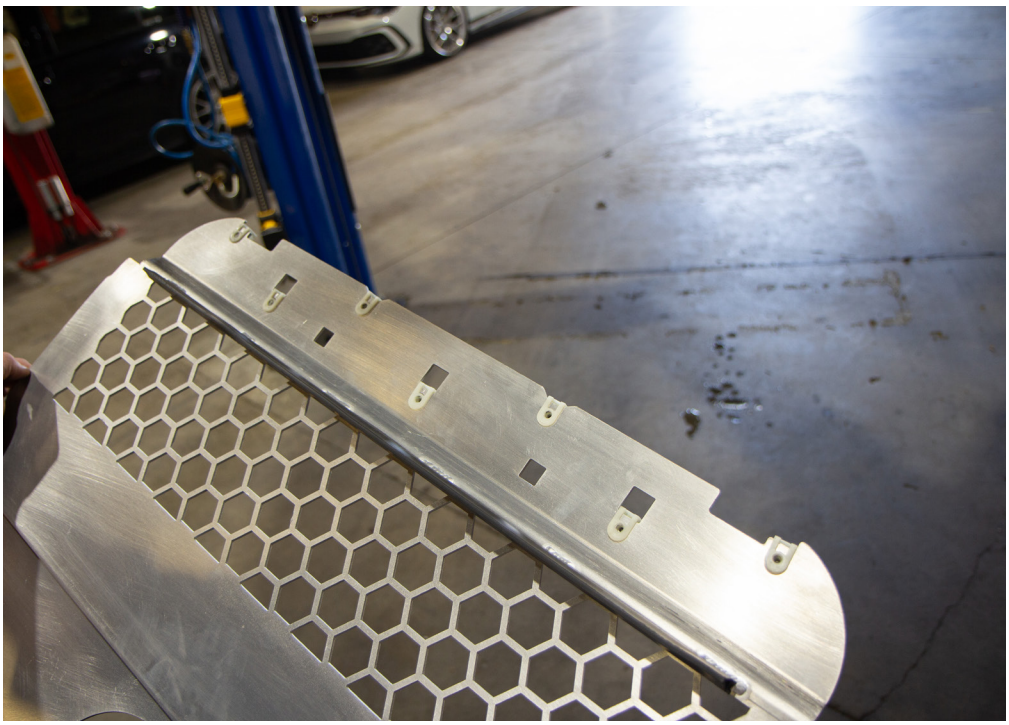

STEP 5

Get the Skid plate into place and secure with the provided spacer and bolt. Once you get these bolts in you can reinstall the rest of the factory screws.



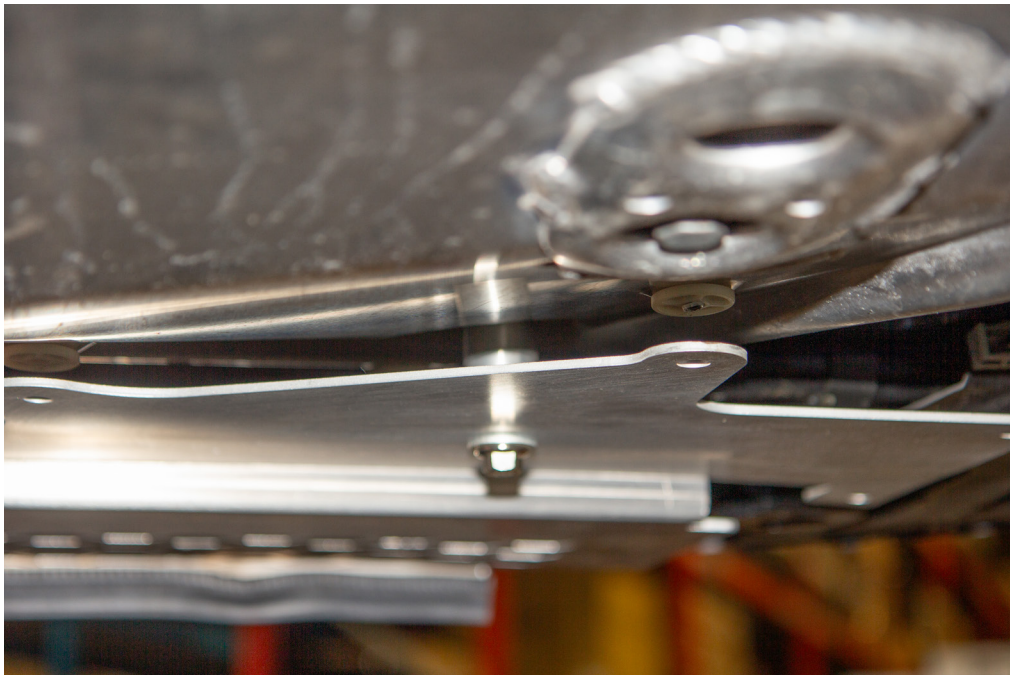

STEP 5 CONT



STEP 8

Install the factory air dam.



STEP 9

Thats it you are done.

